Compressor Model Number Significance 06E Compressors 06E* 2 Model = 0, Package = 1 or 9, A = shipped without oil Design Variable: **New Compressors** 0 = OEM Model 1 = Carrier A/C Model (New) 6 = Carrier A/C Model (Old) Service Compressors 2 = New Manufactured (A/C) 4 = Remanufactured (Low Temp) 6 = Remanufactured (A/C) 7 = Remanufactured (Med Temp) 8 = Remanufactured (Tecumseh) 9 = New Manufactured (Tecumseh) **Electrical Characteristics** (XL & PW start, unless noted) 0 = 208/230 - 3 - 601 = 575 - 3 - 603 = 208/230/460 - 3 - 604 = 200 - 3 - 60 (PW)5 = 230 - 3 - 606 = 400/460 - 3 - 608 = 230 - 3 - 509 = 220/380 - 3 - 60Displacement In CFM 06ER899 - 06E299 body with 30 HP motor; no spacer ring; low temp val plts Compressor Type 2* Unloading Unloader Head 06E New Compressor, A/C Duty None 1 Step Elec. 06E В J New Compressor, A/C Duty Old Design С Κ New Compressor, A/C Duty 2 Step Elec. 06E Hot Gas 1 Step Pres. By-Pass 06E D L New Compressor, A/C Duty New Compressor, A/C Duty 2 Step Pres. 06E Ε Ν 2 New Compressor, A/C Duty 1 Step Elec. New Design 06E 6 06E 3 7 New Compressor, A/C Duty 2 Step Elec. Suction 06E 4 8 New Compressor, A/C Duty 1 Step Pres. Cut-Off New Compressor, A/C Duty 06E 5 2 Step Pres. 06E М New Compressor, Refr. Duty Med Temp 06E R New Compressor, Refr. Duty Low Temp 06E Τ Service Compressor - Replace 06E2, 3, 4, 5, 6, 7, 8 & 9

06E

06E

06E

Χ

Υ

Ζ

Service Compressor - Replace 06EA, B, C, D, F, J, K, L, & N..

Service Compressor Refrigeration Duty Replaces 06ER

Service Compressor Refrigeration Duty Replaces 06EM

1* = Standard Center Cylinder Head (Discharge Service Valve Out Over Oil Pump) 2* = Reversed Center Cylinder Head (Discharge Service Valve Out Over Motor Barrel)